



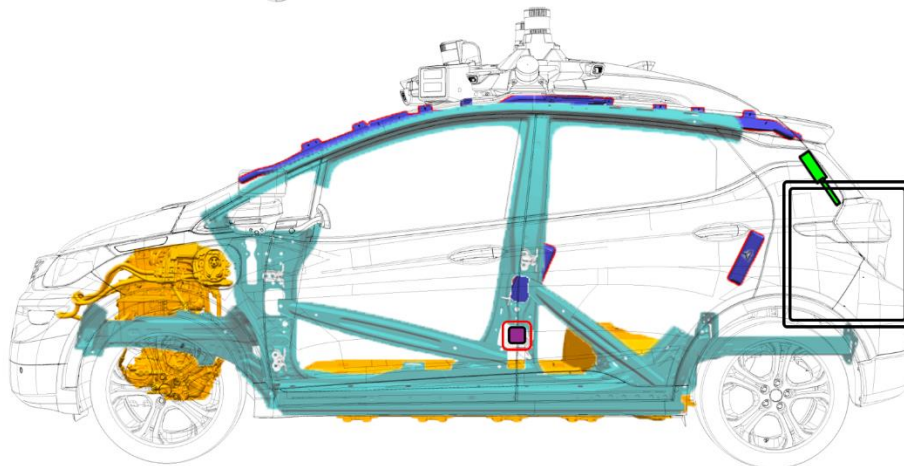

Cruise  
AV  
2022 -

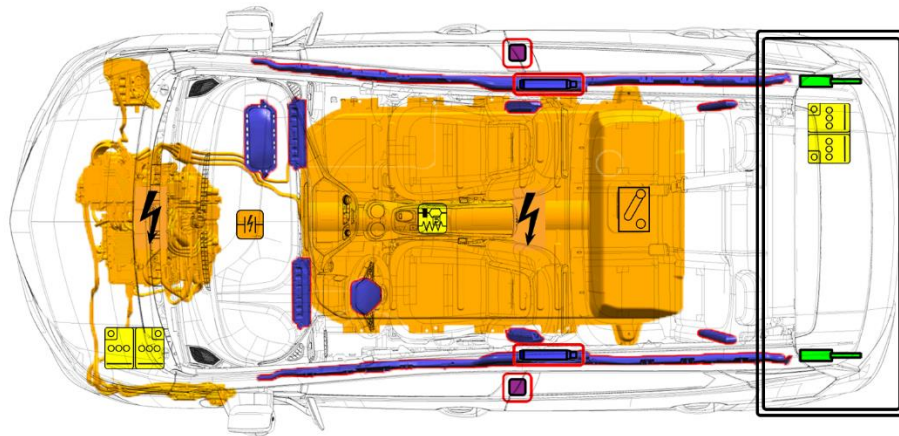

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut/ Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable component		High voltage disconnect		Fuse box disabling high voltage system		Ultra capacitor, high voltage

<b>DO NOT CUT ANY ORANGE COLORED HIGH VOLTAGE CABLES.</b>	<b>Identification Number</b>	<b>Version Number</b>	<b>Page Number</b>
	5G2-21101	2	1

## 1. Identification / recognition



Lack of engine noise does not mean vehicle is off: vehicle movement capability exists until vehicle is fully shut down. Always wear appropriate PPE.

### Vehicle Identification



### First Responder Information Label



## 2. Immobilization / stabilization / lifting

### IMMOBILIZE VEHICLE:


1. Block the wheels.
2. Locate the red stickers on the center console and steering wheel:
  - Pull the Electric Parking Brake (EPB) switch on the center console momentarily.
  - Press the button on top of the shift lever to shift to P (Park).
  - Press the cruise control button on the left side of the steering wheel.



### LIFTING POINTS:




Indicates primary lifting locations.

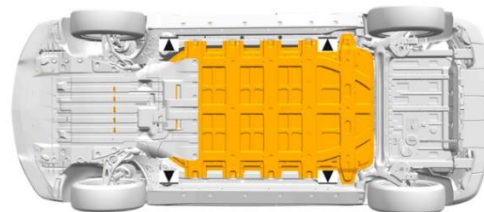

## 3. Disable direct hazards / safety regulations


### MAIN METHOD:

1. Press the POWER button to disable vehicle propulsion.

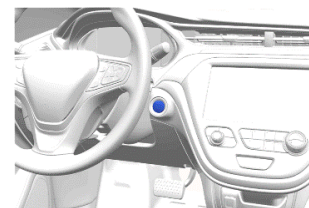


The hood release handle is located on the lower hinge pillar behind a security cover. Do the following to access the handle:

2. Starting at the rear of the front side door sill garnish molding, use a flat-bladed tool to disengage the retainers from the door sill area.
3. Pull the front side door sill garnish molding rearwards to disengage the retainer at the hinge pillar.
4. Pull the hood release handle to open the hood.

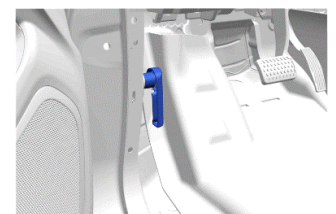

5. Double cut the low voltage cable marked by the yellow tape, located at the left front corner of the vehicle. Ensure that the cuts are clean and that there is no risk of loose wires touching.


Do NOT cut any orange colored high voltage cables.

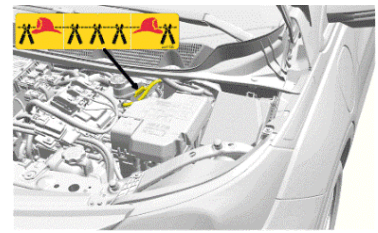

After disabling 12-volt power, wait at least 10 seconds to allow any un-deployed airbag reserve energy to dissipate.

**ALTERNATE CUT LOCATION:**

Only use the alternative cut location if the main cut location cannot be accessed. The liftgate can only be opened with the keyless remote. If the keyless remote is not available, First Responder tools may be necessary. Double cut the negative battery cable located in the rear compartment.

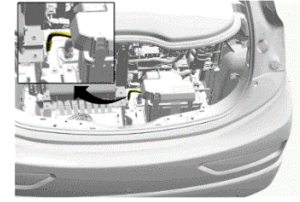

**VEHICLE AT CHARGE STATION:**



If able, terminate charging by removing the charge handle from the vehicle. If enabled, the vehicle's anti-theft alarm may activate.



Level 2 charge handle is shown; Level 3 (DC Fast Charge) handle is moderately larger and may require additional effort to disconnect.



**4. Access to the occupants**


Refer to the front page for illustrations high strength zones and specific safety related component locations.

 - The windshield is made of Laminated Glass  
 - The door windows and rear window are made of Tempered Glass

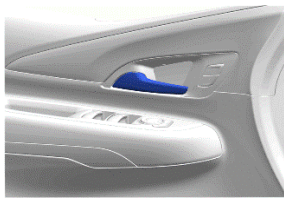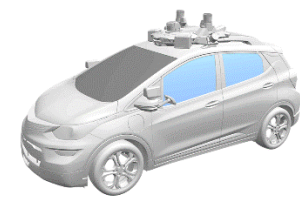


If the doors remain locked, pull **twice** on the inside door handle to gain access to the occupant at each seating location.


**Steering Column Adjustment**

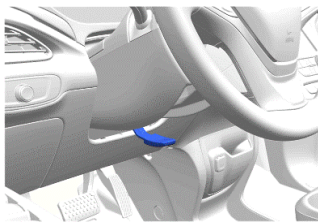


**Seat Controls**

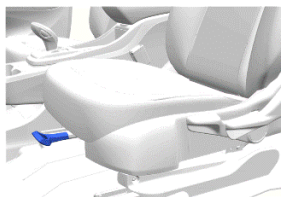

Fore and Aft Adjuster

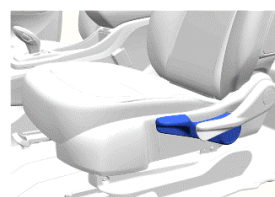

Height Adjuster

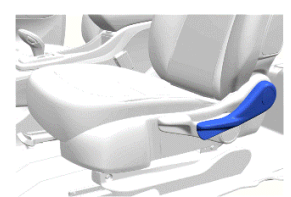

Recline Adjuster

**5. Stored energy / liquids / gases / solids**

**Li-ion**



Coolant leaking inside the battery pack can become unstable and possibly a risk for a fire. Check the battery pack temperature using a thermal imaging camera.

## 6. In case of fire



A battery on fire will not explode.



Use copious amounts of water to cool the battery and to extinguish a fire.



Potential for Battery Re-Ignition.

## 7. In case of submersion

 
 
 
All high voltage components and the high voltage battery enclosure are connected to the vehicle chassis ground. If the vehicle is immersed in water, you will not be electrocuted by touching the vehicle.

## 8. Towing / transportation / storage

Front Tow Hook



GM recommends a flatbed carrier to transport a disabled vehicle.



Store the vehicle a safe distance/separated from other vehicles.



Potential for continued hazards (rekindling/re-gassing/etc) if a damaged vehicle battery is jostled during recovery, including the towing and storage process.

## 9. Important additional information



The locked and protected rear compartment area of this vehicle contains all the automated driving and processing hardware, powered by a dedicated 12V battery.

This vehicle is supported by OnStar and Cruise Remote Assistance.

## 10. Explanation of pictograms used

	Electric Vehicle		General warning sign		Warning, Electricity
	Battery Technology		Lifting Points		Thermal Imaging Camera
	Flammable		Toxic		Corrosive
	Injury Risk		Use Water		