




# CADILLAC Celestiq 5 Door Sedan 2025 -

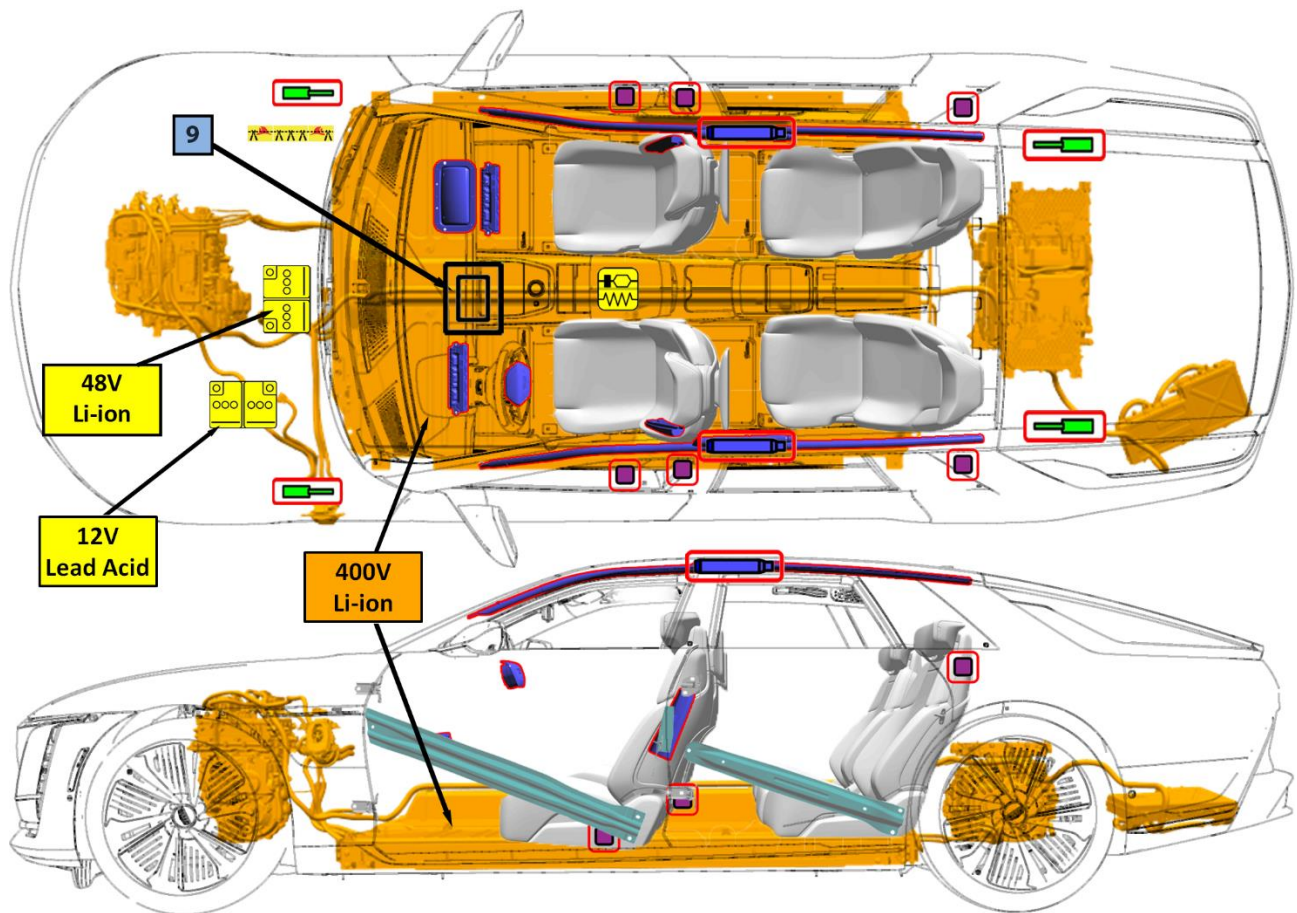

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Gas strut/Preloaded spring
	High strength zone		Zone requiring special attention		Battery low voltage		High voltage battery pack		High voltage power cable component
	Cable Cut Location								

DO NOT CUT ANY ORANGE COLORED HIGH VOLTAGE CABLES.

Identification Number

1G6-23101

Version Number

1

Page Number


Page 1 of 4

## 1. Identification / recognition



Lack of engine noise does not mean vehicle is off: vehicle movement capability exists until vehicle is fully shut down. Always wear appropriate PPE.

### Emblems and Badging

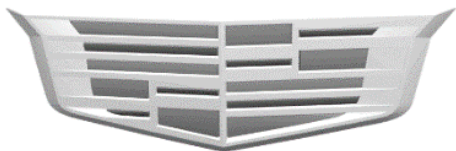


### First Responder Information Label



## 2. Immobilization / stabilization / lifting

### IMMOBILIZE VEHICLE:

1. Block the wheels.
2. Press the Electric Parking Brake (EPB) switch momentarily. The red parking brake status light will flash and then stay on once the EPB is fully applied.
3. Press the button at the end of the shift lever to shift to P (Park).

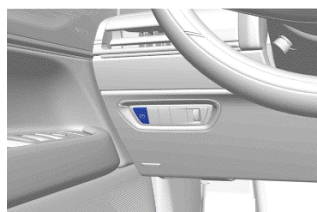


### LIFTING POINTS:



There are features on the body of the vehicle, for use as primary lifting points.

Do NOT lift the vehicle from any locations on the high voltage battery.

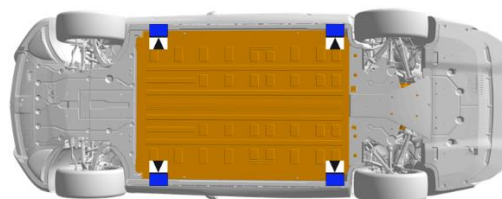

## 3. Disable direct hazards / safety regulations







The vehicle is equipped with a battery management system with internal fault detection, including thermal runaway mitigation. In the event of a **"Battery Danger Detected"** notification, DO NOT disable the 12v battery.

Airbags can be disabled by removing the 12v battery negative cable. DO NOT disable the 12v battery in the event of a **"Battery Danger Detected"** notification.

### MAIN METHOD:

1. Power the vehicle off:
  - When the drive cycle is complete and the vehicle is shifted to P (Park), the seat belt is unbuckled, and the door is opened for driver's exit.
  - The vehicle can be turned off by pressing the "Vehicle Off" symbol on the infotainment display. If a collision is detected an additional emergency vehicle off icon will appear on the display and can be pressed to turn the vehicle off.
2. Consider any manipulations of power devices in the vehicle (steering wheel, power seats, windows, etc.) **prior to** cutting the first responder loop.
3. Open the hood using one of the three methods:
  - Hands free at front of vehicle when remote key is within 1 m (3 ft).
  - Instrument panel switch.
  - Release cable in driver's footwell.
4. Remove the access cover.
5. Double cut the first responder loop on both sides of the yellow tape. Ensure that the cuts are clean and that there is no risk of loose wires touching.
6. Remove the cut section of cable from the vehicle.

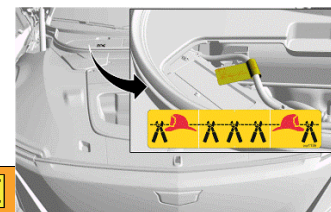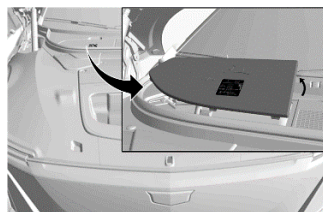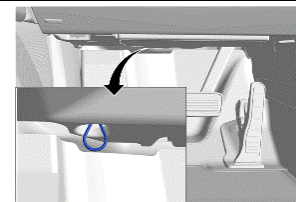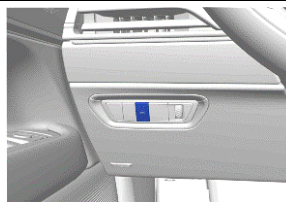

This cut will disable the high voltage.



After disabling the first responder cut loop, wait at least 1 minute to allow high voltage energy to discharge.

**DO NOT CUT ANY ORANGE COLORED HIGH VOLTAGE CABLES.**

Identification Number

1G6-23101

Version Number

1

Page Number



Page 2 of 4



## VEHICLE AT CHARGE STATION:

If able, terminate charging by removing the charge handle from the vehicle. If enabled, the vehicle's anti-theft alarm may activate. If the charge handle will not release, a manual release loop is located underhood, under an access cover near the left wiper arm.

The common charge handle is shown; The DC Fast Charge handle is moderately larger and may require additional effort to disconnect.

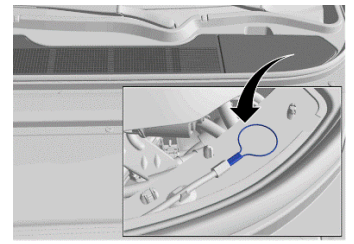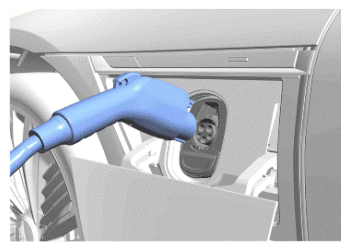

## 4. Access to the occupants


Refer to the front page for illustrations of high strength zones and specific safety related component locations.




The windshield, roof, door windows, rear quarter windows, and rear liftgate window are made of Laminated Glass.




The outer surfaces of the aluminum front roof header and B- pillar are covered in Tempered Glass.

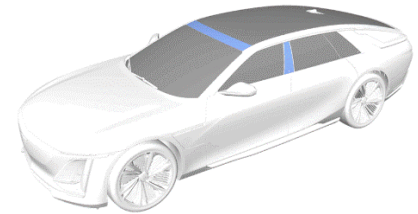

### Outside Door Release

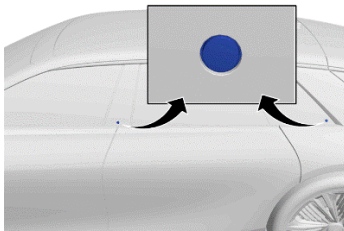


### Inside Door Release

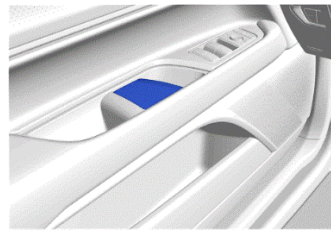

If the doors remain locked, pull **twice** on the inside door handle to gain access to the occupant at each seating location.

**NOTE:** An alternative method for rear passenger access may be necessary if the rear door child safety locks are engaged.


### Steering Column Controls

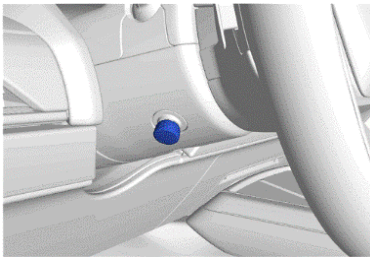

### Seat Controls



### Rear Seat Child Seat Anchor Points

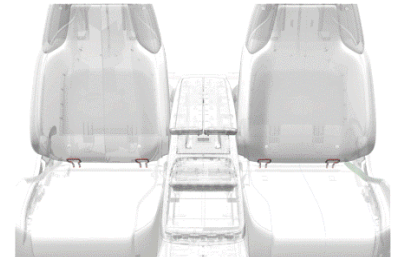

## 5. Stored energy / liquids / gases / solids



12V  
Lead Acid



48V  
Li-ion



400V  
Li-ion



Coolant leaking inside the battery pack can become unstable and possibly a risk for a fire. Check the battery pack temperature using a thermal imaging camera.

## 6. In case of fire



A battery on fire will not explode.



Always wear Self-Contained Breathing Apparatus (SCBA).

Use copious amounts of water to cool the battery and to extinguish a fire.

**DO NOT CUT ANY ORANGE COLORED HIGH VOLTAGE CABLES.**

Identification Number

1G6-23101

Version Number

1

Page Number

Page 3 of 4



Potential for Battery Re-Ignition.

## 7. In case of submersion

The high voltage battery is isolated from the vehicle chassis. If the vehicle is immersed in water, you will not be electrocuted by touching the vehicle.


After the vehicle was removed from the water, do the following:

1. Allow the vehicle to dry out.
2. Perform the high voltage disabling procedure in Section 3.



## 8. Towing / transportation / storage

Carefully open the cover in the fascia by using the small notch that conceals the tow eye socket.

Install the tow eye into the socket and turn it until it is fully tightened. When the tow eye is removed, reinstall the cover with the notch in the original position.

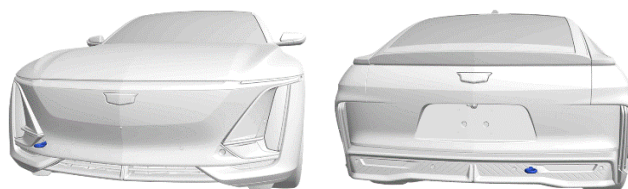

General Motors recommends a flatbed carrier to transport a disabled vehicle. A wheel lift truck along with properly rated tow dollies can be used if a flatbed carrier is not available.



Moving the vehicle with the drive wheels on the ground will generate unwanted energy. Limit the movement of the vehicle to the distance required to prepare the vehicle for towing.

Store the vehicle a safe distance/separated from other vehicles.



Potential for continued hazards (rekindling/re-gassing/etc) if a damaged vehicle battery is jostled during recovery, including the towing and storage process.

## 9. Important additional information

This vehicle is supported by OnStar, where available.

This vehicle does NOT have a power button. The vehicle will turn off when shifted to P (Park), the seat belt is unbuckled, and the door is opened for driver's exit. The "Vehicle Off" or "Emergency Vehicle Off" symbols will appear on the Infotainment Display and can be used to turn the vehicle off. The "Emergency Vehicle Off" symbol will only appear when a collision is detected.

## 10. Explanation of pictograms used

	Electric Vehicle		General warning sign		Warning, Electricity
	Battery Technology		Lifting Points		Thermal Imaging Camera
	Flammable		Toxic		Corrosive
	Injury Risk		Use Water		Cable Cut Location