



# 2007 Saturn VUE Green Line Hybrid Emergency Response Quick Reference\*



## Procedures for Disabling Electrical

### Disabling 12 Volt Power


Perform ALL of the following 3 steps to disable the 12 volt electrical system. This includes power to the airbag system.

1. Turn the ignition key to the OFF position

OR if the ignition key is not accessible, remove the 30 amp ignition maxi fuse (green) located in an underhood fuse block


2. Disconnect or cut BOTH 12v negative (-) battery cables

30 amp Ignition Maxi Fuse

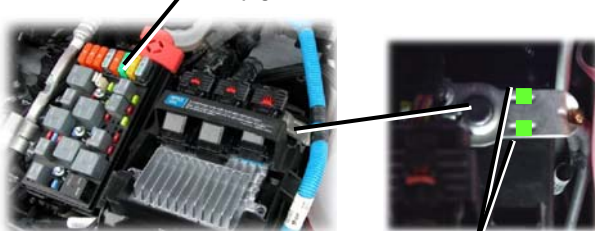

Cut here to disable BOTH 12v negative cables at the same time

3. Verify tachometer is pointing to OFF

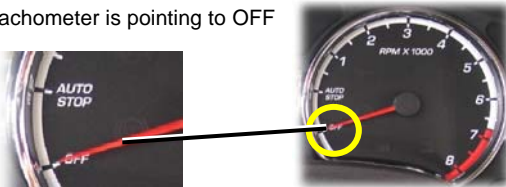

**WAIT** a minimum of 10 seconds to allow any undeployed airbag reserve energy to dissipate.

**Note:** Since one of the 12v negative (-) cables is partially hidden from view, it is best to disconnect the cables from the terminal or cut the cables near the terminal.

### 36 Volt Electrical System

First perform the "Disabling 12 Volt Power" procedure above. This also reduces the 36 volt current flow to an acceptably low level in the blue intermediate voltage (36v) cable. No further action is required.

**Do NOT** cut the blue intermediate voltage (36v) cable, because there is a higher arc potential.



**CAUTION:**  
Cutting the blue cable may result in an arc hazard.

For more information, consult the 2007 Saturn VUE Green Line Hybrid Emergency Response Guide at [www.gmstc.com](http://www.gmstc.com)

© Copyright 2006, General Motors Corporation


## Key Components and Cut Zones

### Vehicle Identification



### Cut Zones


**DO NOT CUT HERE.** Roof rails may contain side impact air bag inflator canisters

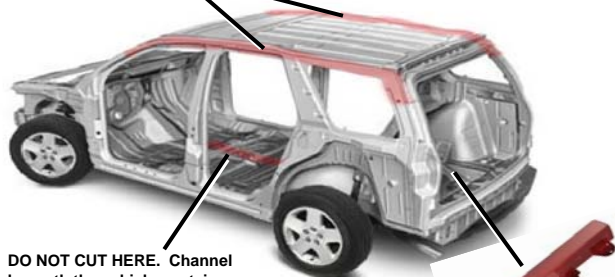

**DO NOT CUT HERE.** Channel beneath the vehicle contains intermediate 36v electrical wires

**DO NOT CUT HERE.** Hybrid Battery has 36v electrical potential at all times.

### Key Hybrid Components

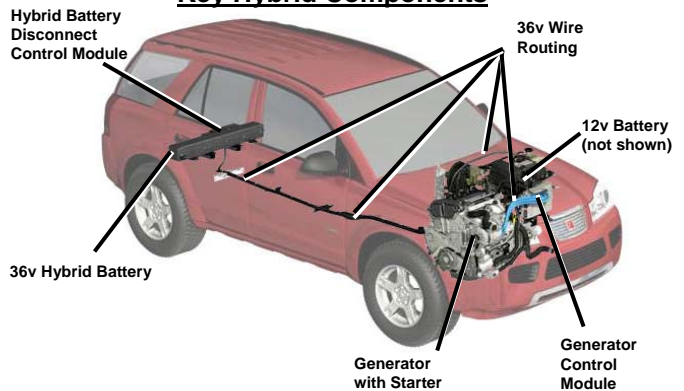

GM Service Technical College provides this QR free of charge to First Responders. This sheet can be displayed in a classroom as long as it is represented as GM information and is not modified in any way.

For information regarding modification of GM's First Responder Information for other uses, contact GM's Licensing Manager at:

GM Licensing Program Headquarters  
5775 Enterprise Ct  
Warren, MI 48092  
Attn: Licensing Coordinator