


INFORMATION FOR FIRST AND SECOND RESPONDERS
EMERGENCY RESPONSE GUIDE




BrightDrop EV600
Truck / Van
Li-ion Battery



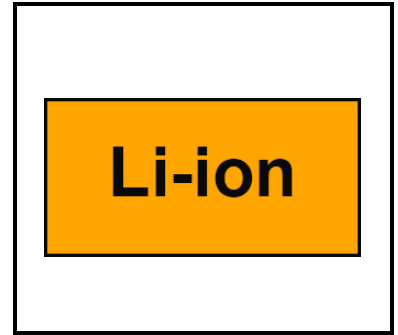






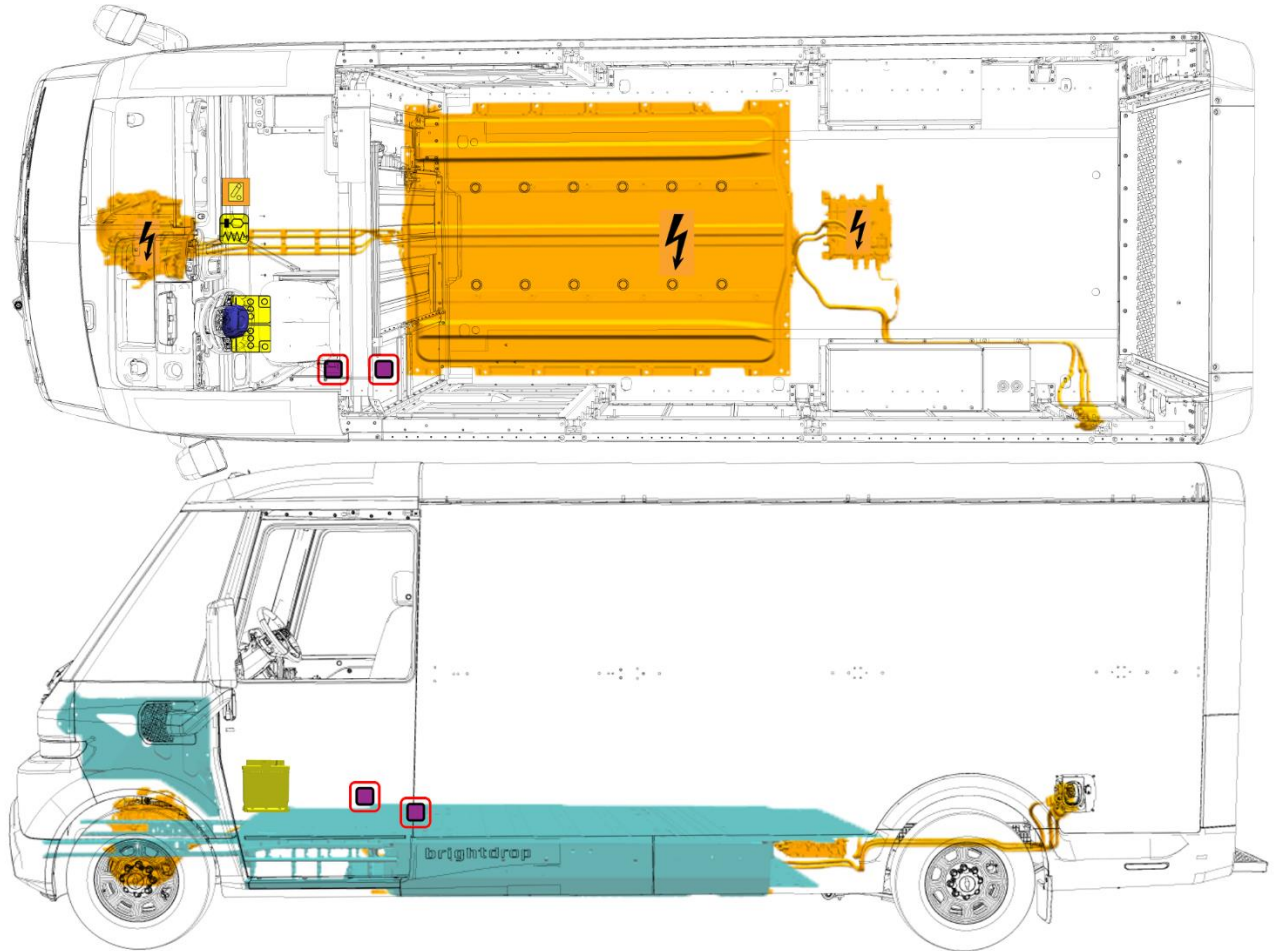











CONTENTS

0. Rescue Sheet	Page	3
1. Identification / recognition	Page	4
2. Immobilization / stabilization / lifting	Page	5
3. Disable direct hazards / safety regulations	Page	6
4. Access to the occupants	Page	7
5. Stored energy / liquids / gases / solids	Page	9
6. In case of fire	Page	9
7. In case of submersion	Page	10
8. Towing / transportation / storage	Page	10
9. Important additional information	Page	11
10. Explanation of pictograms used	Page	12

0. Rescue Sheet



	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut/Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable component		High voltage disconnect		Fuse box disabling high voltage system		Ultra capacitor, high voltage

1. Identification / recognition



Advise Dispatch and all responders that an electric vehicle is involved.




Lack of engine noise does not mean vehicle is off: vehicle movement capability exists until vehicle is fully shut down. Always wear appropriate PPE.


Emblems and Badging



Hood Emblem

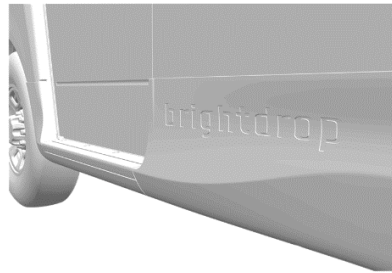

Side Badging

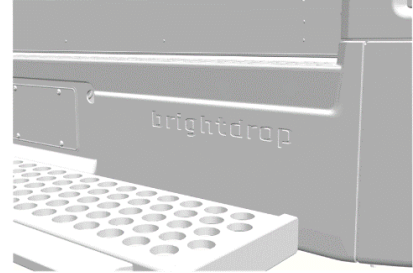

Rear Badging




High Voltage Battery Information




The battery is a High Voltage (Class B) Li-ion pack, that is mounted under the vehicle and is a structural part of the floor pan.



Battery Warning Label

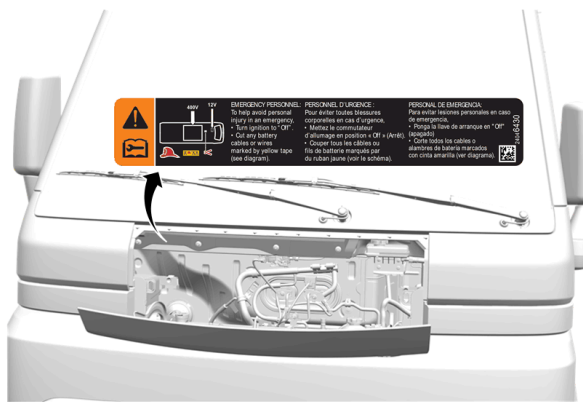

The battery warning label is located on the dash panel upper extension on the right side of the vehicle.

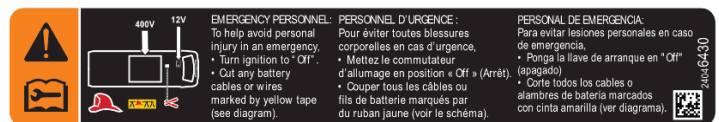


2. Immobilization / stabilization / lifting



IMMOBILIZE VEHICLE

- Block the wheels.
- Follow procedures for conventional vehicles.

Electric Parking Brake (EPB)

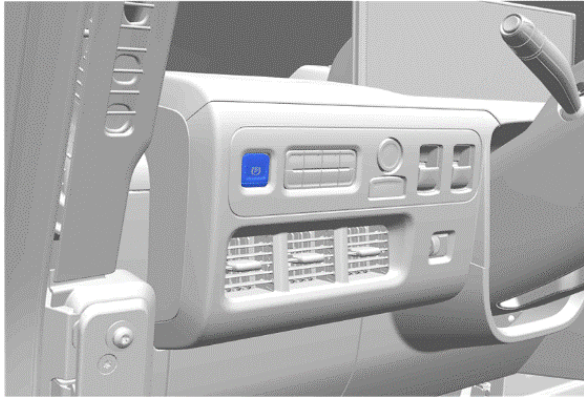

Applying the Electric Parking Brake


Press the EPB switch momentarily. The red parking brake status light will flash and then stay on once the EPB is fully applied.

Releasing the Electric Parking Brake

1. Turn the ignition on or to ACC/ACCESSORY.
2. Apply and hold the brake pedal.
3. Press the EPB switch momentarily.

The EPB is released when the red parking brake status light is off.


Electric Drive Unit Shift Lever

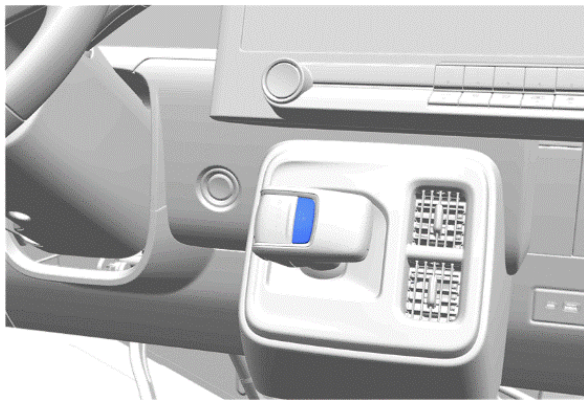

Shifting into Park

When the vehicle is stopped, press the button on top of the shift lever to shift to P (Park).

Power Button

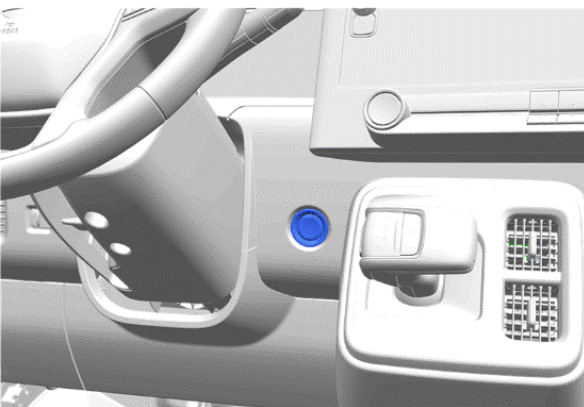


To turn the vehicle off, press the button on top of the shift lever to shift to P (Park) and press the POWER button.

Alternatively, press and hold the POWER button. The electric drive unit will shift to P (Park) then shut off automatically.



Lifting Points

There are features on the body of the vehicle, for use as primary lifting points. Do NOT lift the vehicle from any locations on the high voltage battery.

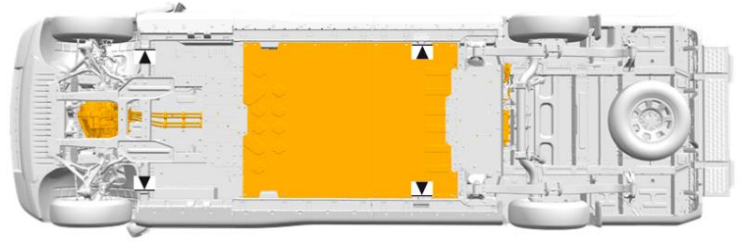

3. Disable direct hazards / safety regulations


Thermal Runaway Mitigation



This vehicle is equipped with thermal runaway mitigation. In the event of a thermal runaway incident, Do NOT disable the 12-volt system until after the software has completed its cycle.

Automatic safety systems are enabled when 12-volt power is available. When these safeguards are activated, information about this feature will be displayed on the driver instrument panel as well as external signals. When this safety system is active, the horn will sound and the hazard lights will flash. OnStar will call the vehicle and First Responders.

Power Button

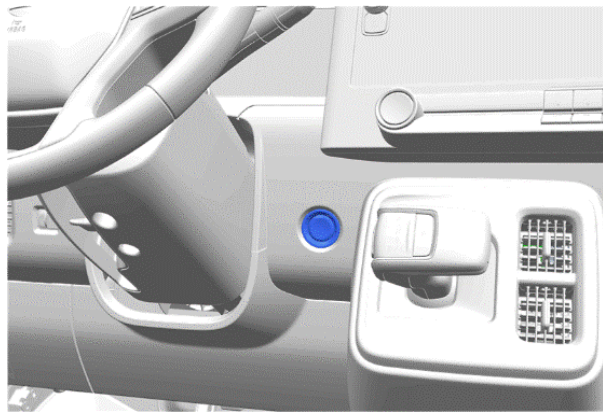

If the vehicle is already in PARK state, press the POWER button to disable vehicle propulsion.


Alternatively, press and hold the POWER button. The electric drive unit will shift to P (Park) then shut off automatically.



The high voltage system can remain energized even when the vehicle is in the OFF state.




Hood Release

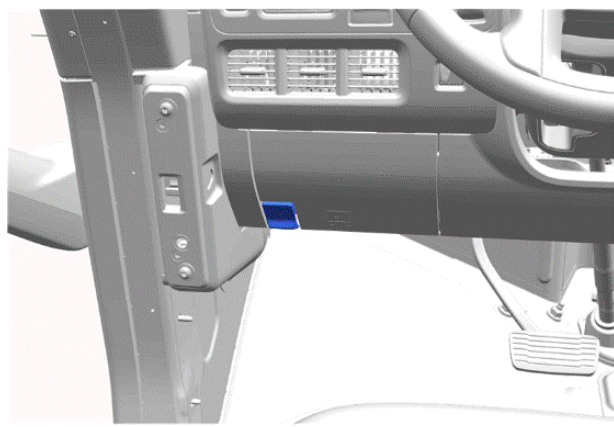

The hood release handle is located at the outboard side of the instrument panel, although, the 12V cut-loop is under the instrument panel INSIDE the passenger compartment.



Low Voltage Cable Access

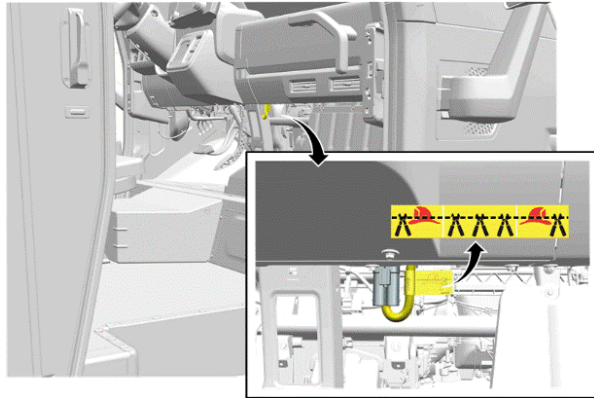


Low Voltage Cable

From **INSIDE** the vehicle, double cut the low voltage cable marked by the yellow tape located just below the instrument panel, near the center of the vehicle. Ensure that the cuts are clean and that there is no risk of loose wires touching.

This cut will disable the airbag and high voltage.

DO NOT CUT ANY ORANGE COLORED HIGH VOLTAGE CABLES.

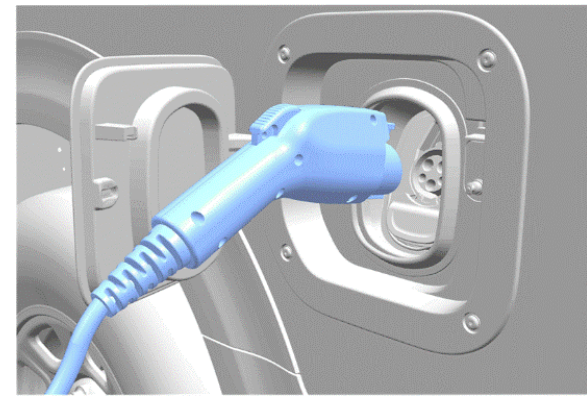

VEHICLE AT CHARGE STATION:



If able, terminate charging by removing the charge handle from the vehicle.


The common charge handle is shown; The DC Fast Charge handle is moderately larger and may require additional effort to disconnect.

4. Access to the occupants


Refer to the vehicle *Rescue Sheet* for illustrations that show the locations of High Strength Structural Components, High Voltage Components, and Safety Components.

Vehicle Glass and Removable Roof Panels

-  - The windshield is made of Laminated Glass
-  - The front quarter and side pocket door windows are made of Tempered Glass

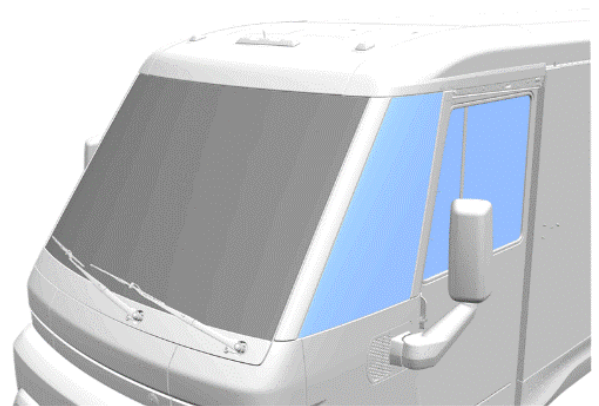

Passenger Compartment Door Access

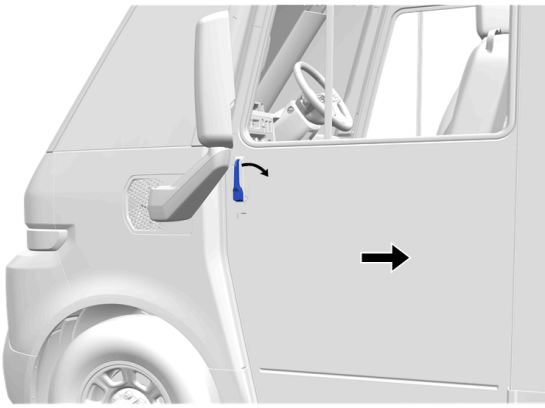


The side access and bulkhead doors are *pocket door* designs. These doors incorporate upper and lower guide tracks.

- The side pocket doors slide from front to rear.
- The bulkhead door slides from right to left and is stored in the bulkhead behind the driver.


The inside and outside door handles are actuated by rotating the top of the handle from the front to the rear of the vehicle.

Steering Column Adjustment

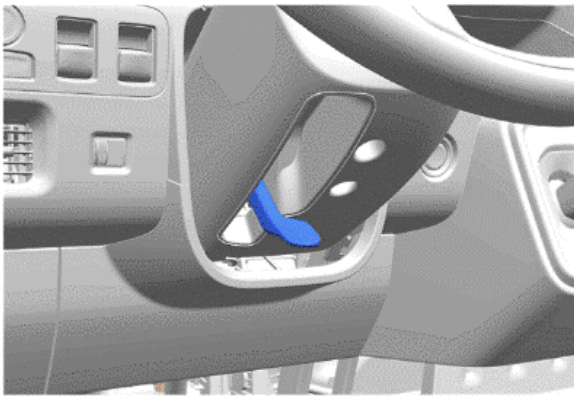


1. Pull (or lower) the lever down.
2. Move the steering wheel up or down.
3. Move the lever up to lock the steering wheel in place.


Driver Seat Controls

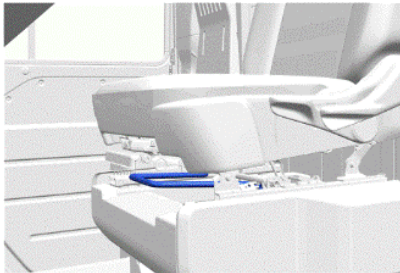

Fore and Aft Adjuster

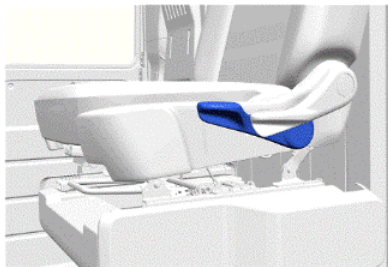


Height Adjuster

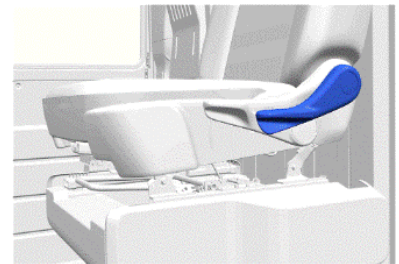


Recline Adjuster

Passenger Jump Seat

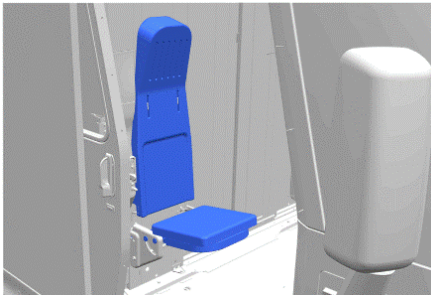

High Strength Steel Structure

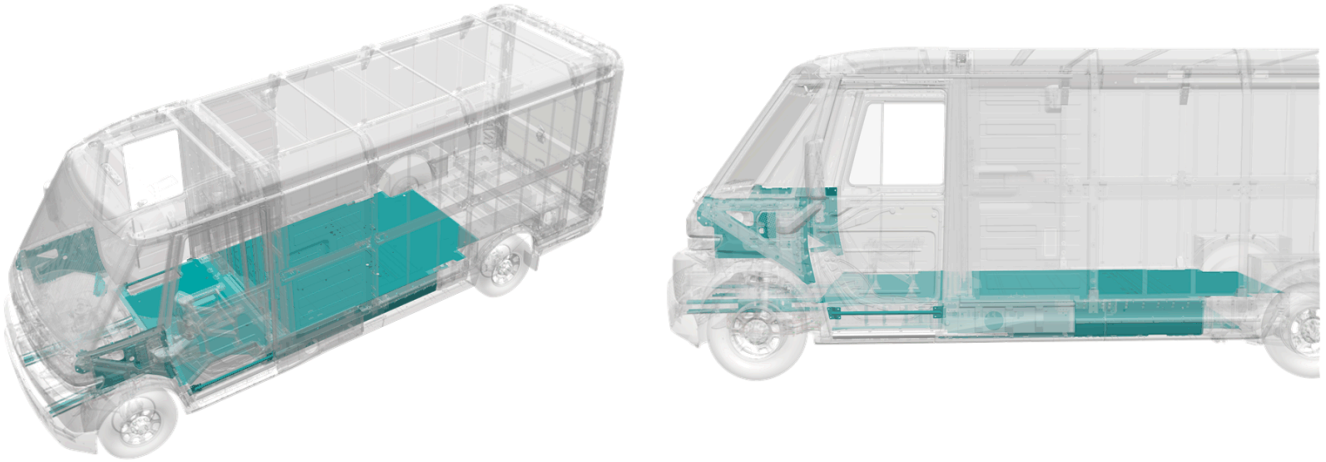


The passenger compartment is protected using high strength steel in the pillars, rocker panels, door reinforcement beams, and floor structure.

Occupant Restraint Systems

The EV600 is equipped with a Driver Airbag on the steering wheel.

There are seat belt restraints for two occupants. The driver seat belt system includes two pre-tensioners. One is seat belt retractor-mounted and the other is mounted to the seat belt anchor on the seat riser.

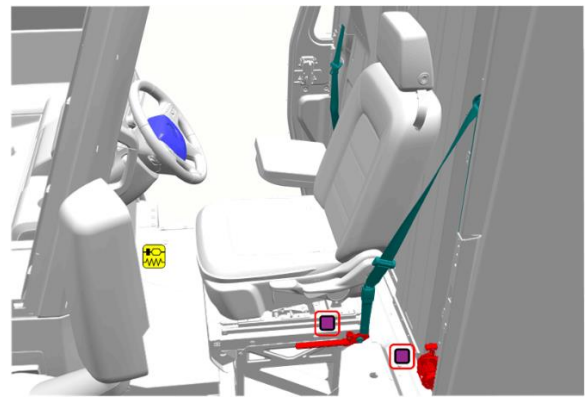

5. Stored energy / liquids / gases / solids

Li-ion

High Voltage Lithium Ion Chemistry Battery



High Voltage Warning, potential for electric shock



Gases emitted from the battery pack are flammable



Gases emitted from the battery pack are toxic



Skin contact may cause irritation. Prolonged contact with electrolyte mixture may result in more severe irritation.
Flush contaminated skin with plenty of water.



Coolant leaking inside the battery pack can become unstable and possibly a risk for a fire. Check the battery pack temperature using a thermal imaging camera.

6. In case of fire



High Voltage Warning, potential for electric shock



A battery on fire will not explode



A battery on fire will not explode. If battery cells reach high enough temperature, they vent and release electrolyte. Battery electrolyte is flammable.



Gases emitted from the battery pack are toxic



Skin contact may cause irritation. Prolonged contact with electrolyte mixture may result in more severe irritation.
Flush contaminated skin with plenty of water.



Potential for eye, nose, and throat irritation with prolonged exposure.



Use copious amounts of water to cool the battery and to extinguish a fire. Do NOT use an ABC dry chemical extinguisher because it will not extinguish a battery fire.



Potential for Battery Re-Ignition.

7. In case of submersion

The high voltage battery is isolated from the vehicle chassis. If the vehicle is immersed in water, there is no risk of electrocution by touching the vehicle.

After the vehicle was removed from the water, do the following:


1. Allow the vehicle to dry out.
2. Perform the high voltage disabling procedure in Section 3.

8. Towing / transportation / storage

Tow Hooks




Carefully open the cover in the fascia by using the small notch that conceals the tow eye socket.

Install the tow eye into the socket and turn it until it is fully tightened. When the tow eye is removed, reinstall the cover with the notch in the original position.

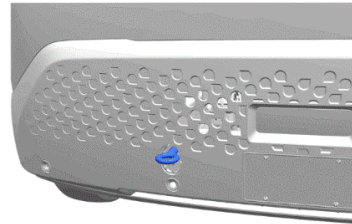

Vehicle Towing and Transportation

BrightDrop recommends a flatbed carrier to transport a disabled vehicle.

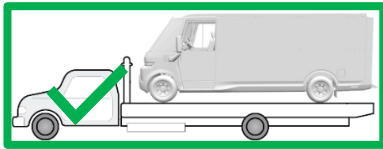

Post-Crash Vehicle Storage

Store the vehicle a safe distance/separated from other vehicles.

















Potential for continued hazards (rekindling/re-gassing/etc) if a damaged vehicle battery is jostled during recovery, including the towing and storage process.

9. Important additional information

This vehicle is supported by OnStar, where available.

10. Explanation of pictograms used

	Electric Vehicle		General warning sign		Warning, Electricity
	Battery Technology		Lifting Points		Thermal Imaging Camera
	Flammable		Toxic		Corrosive
	Injury Risk		Use Water		Front Compartment Release
	Low Voltage disconnect of High Voltage system		Cable Cut Location		