



Chevrolet Bolt EUV 2022-2023





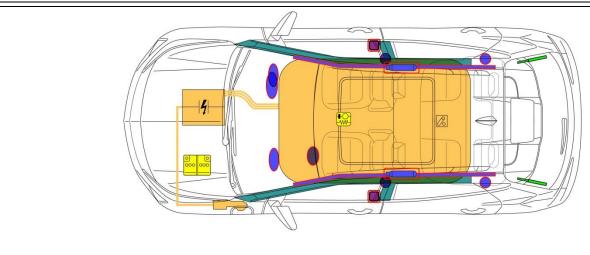

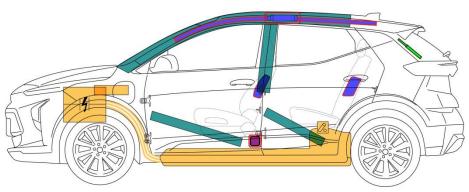

		A			Seat belt	I		(h	Pedestrian
	Airbag		Stored gas inflator		pretensioner	<u></u>	SRS control unit		protection active system
3	Automatic rollover protection system		Gas strut/ Preloaded spring		High strength zone		Zone requiring special attention		
000 000	Battery low voltage	HH	Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack	2	High voltage power cable component	0	High voltage disconnect		Fuse box disabling high voltage system	4	Ultra capacitor, high voltage

Ide	dentification Number	Version Number	Page Number	
	1G1-21202	3	1	

1. Identification / recognition




Lack of engine noise does not mean vehicle is off: vehicle movement capability exists until vehicle is fully shut down. Always wear appropriate

Nameplate





The BOLT EUV can be identified by those emblems that appear on the front fender upper applique and the liftgate of the vehicle.

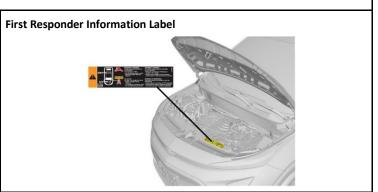


2. Immobilization / stabilization / lifting

IMMOBILIZE VEHICLE:

- 1. Block the wheels.
- 2. Pull the Electric Parking Brake (EPB) switch.
- 3. Press the P (Park) button.



LIFTING POINTS:

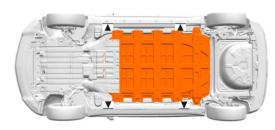



Indicates primary lifting locations.


3. Disable direct hazards / safety regulations

MAIN METHOD:

- 1. Press the POWER button to disable vehicle propulsion.
- 2. Remove the keys from the vehicle.
- 3. Open the hood.
- 4. Double cut the low voltage cable marked by the yellow tape.

Do NOT cut any orange colored high voltage cables.

After disabling 12-volt power, wait at least 10 seconds to allow any un-deployed airbag reserve energy to dissipate and wait at least 1 minute to allow high voltage energy to discharge.

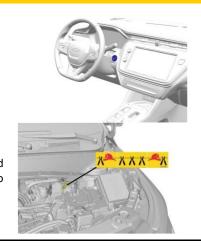

VEHICLE AT CHARGE STATION:


If able, terminate charging by removing the charge handle from the vehicle. If enabled, the vehicle's anti-theft alarm may activate.

The common charge handle is shown; The DC Fast Charge handle is moderately larger and may require additional effort to disconnect.



4. Access to the occupants

Refer to the front page for illustrations high strength zones and specific safety related component locations.

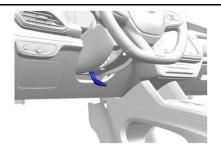





Steering Column Adjustment

Seat Adjustment



Opening a Locked Door

If the doors remain locked, pull **twice** on the inside door handle to gain access to the occupant at each seating location.



- The windshield and the roof glass are made of Laminated Glass



- The side door windows and the liftgate window are made of Tempered Glass



5. Stored energy / liquids / gases / solids

Li-ion















Coolant leaking inside the battery pack can become unstable and possibly a risk for a fire. Check the battery pack temperature using a thermal imaging camera.

6. In case of fire















Potential for Battery Re-Ignition.





7. In case of submersion


All high voltage components and the high voltage battery enclosure are connected to the vehicle chassis ground. If the vehicle is immersed in water, you will not be electrocuted by touching the vehicle.

8. Towing / transportation / storage



Front Hook

Rear Hook

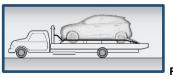

Flatbed towing is the best way to transport the vehicle.







9. Important additional information

This vehicle is supported by OnStar, where available.

10. Explanation of pictograms used						
4	Electric Vehicle		Flammable			
<u>^</u>	General warning sign		Toxic			
4	Warning, Electricity		Corrosive			
Li-ion	Battery Technology		Injury Risk			
	Lifting Points		Use Water			
□ □ IR SS	Thermal Imaging Camera					