


BrightDrop Zevo 600 2022 only







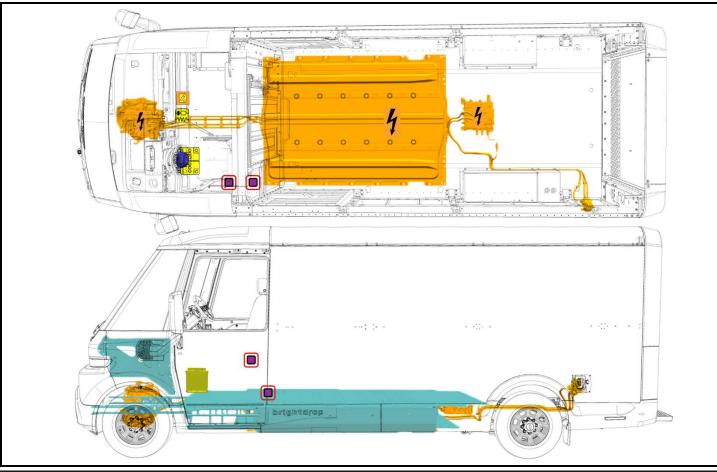


| Airbag | | Stored gas inflator | Seat belt pretensioner | | SRS control unit | | Gas strut/ Preloaded spring |
|--------------------|---------|---------------------|------------------------------|---|------------------------------------|--|--------------------------------|
| High strength zone | 0000000 | Battery low voltage | High voltage battery pack | 1 | High voltage power cable component | ************************************** | Cable Cut Location |


| | Identification Number | Version Number | Page Number |
|--|-----------------------|----------------|-------------|
| DO NOT CUT ANY ORANGE COLORED HIGH VOLTAGE CABLES. | 5G5-21101 | 6 | Page 1 of 4 |


1. Identification / recognition

Lack of engine noise does not mean vehicle is off: vehicle movement capability exists until vehicle is fully shut down. Always wear appropriate PPE.

Emblems and Badging

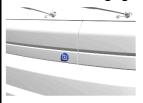

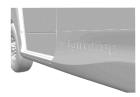

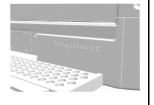



Hood Emblem

Side Badging

Rear Badging

2. Immobilization / stabilization / lifting

IMMOBILIZE VEHICLE:

- 1. Block the wheels.
- 2. Press the Electric Parking Brake (EPB) switch momentarily. The red parking brake status light will flash and then stay on once the EPB is fully applied.
- 3. Press the button on top of the shift lever to shift to P (Park).






LIFTING POINTS:

There are features on the body of the vehicle, for use as primary lifting points.

The lifting point features should only be used for lifting the vehicle. Do NOT use these features as attachment points to move or tie the vehicle down.

Do NOT lift the vehicle from any locations on the high voltage battery.

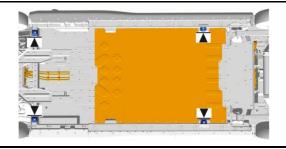

3. Disable direct hazards / safety regulations



The vehicle is equipped with a 12v battery management system with internal fault detection, including thermal runaway alert and mitigation. To keep thermal runaway alert and mitigation available, DO NOT disable the 12v battery. To disable high voltage, cut the first responder cut loop.

In the event of a "Battery Danger Detected, Safely Exit Vehicle" notification, DO NOT disable the 12v battery to disable the horn.


MAIN METHOD:

1. Press the POWER button to disable vehicle propulsion.



From INSIDE the vehicle, double cut the first responder loop marked by the yellow tape. Ensure that the cuts are clean and that there is no risk of loose wires touching.

Airbags can be disabled by removing the 12v battery negative cable. This will disable the thermal runaway alert and mitigation.

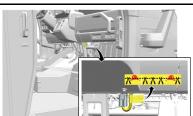





After disabling the first responder cut loop, wait at least 1 minute to allow high voltage energy to discharge.

| | Identification Number | Version Number | Page Number |
|--|-----------------------|----------------|-------------|
| DO NOT CUT ANY ORANGE COLORED HIGH VOLTAGE CABLES. | 5G5-21101 | 6 | Page 2 of 4 |

VEHICLE AT CHARGE STATION:

If able, terminate charging by removing the charge handle from the vehicle.

The common charge handle is shown; The DC Fast Charge handle is moderately larger and may require additional effort to disconnect.



Access to the occupants


Refer to the front page for illustrations high strength zones and specific safety related component locations.




- The windshield is made of Laminated Glass



- The front quarter and side pocket door windows are made of **Tempered Glass**

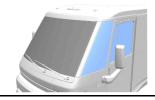

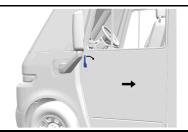

Passenger Compartment Door Access


The inside and outside door handles are actuated by rotating the top of the handle from the front to the rear of the vehicle.

The side pocket doors slide from front to rear.








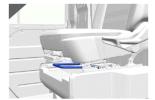





Height Adjuster

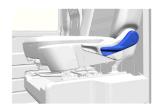

Recline Adjuster

Stored energy / liquids / gases / solids





























Fluid leaking inside the battery pack can become unstable and possibly a risk for fire. Check the battery pack temperature with a thermal imaging camera.

In case of fire













A battery on fire will not explode.



Always wear Self-Contained Breathing Apparatus (SCBA).

Use copious amounts of water to cool the battery and to extinguish a fire.





Potential for Battery Re-Ignition.

| | Identification Number | Version Number | Page Number |
|--|-----------------------|----------------|-------------|
| DO NOT CUT ANY ORANGE COLORED HIGH VOLTAGE CABLES. | 5G5-21101 | 6 | Page 3 of 4 |

7. In case of submersion

The high voltage battery is isolated from the vehicle chassis. If the vehicle is immersed in water, there is no risk of electrocution by touching the vehicle.


After the vehicle was removed from the water, do the following:

- 1. Allow the vehicle to dry out.
- 2. Perform the high voltage disabling procedure in Section 3.

8. Towing / transportation / storage

Carefully open the cover in the fascia by using the small notch that conceals the tow eye socket.

Install the tow eye into the socket and turn it until it is fully tightened. When the tow eye is removed, reinstall the cover with the notch in the original position.

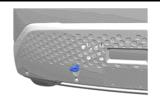





BrightDrop recommends a flatbed carrier to transport a disabled vehicle. A wheel lift truck along with properly rated tow dollies can be used if a flatbed carrier is not available.





The lifting point features should only be used for lifting the vehicle. Do NOT use these features as attachment points to move or tie the vehicle down.







Moving the vehicle with the drive wheels on the ground will generate unwanted energy. Limit the movement of the vehicle to the distance required to prepare the vehicle for towing.



If the horn must be disabled prior to transport, locate and remove the horn fuse from the underhood electrical center.

Storage and Disposal

Store the vehicle outside at a safe distance (15 meters / 50 feet) or separated from flammable objects.

The high voltage battery and leaked battery fluids should be properly disposed of according to local regulations. General Motors recommends removing and recycling the battery. Refer to recyclemybattery.com for more information.





Potential for continued hazards (rekindling/re-gassing/etc) if a damaged vehicle battery is jostled during recovery, including the towing and storage process.

9. Important additional information

This vehicle is supported by OnStar, where available.

| 10. Explanation of pictograms used | | | | | | | |
|------------------------------------|--------------------|----------|----------------------|--|------------------------|--|--|
| 4 | Electric Vehicle | <u> </u> | General warning sign | 4 | Warning, Electricity | | |
| Li-ion | Battery Technology | | Lifting Points | □\(\square\) IR \(\square\) | Thermal Imaging Camera | | |
| ® | Flammable | | Toxic | W. E. | Corrosive | | |
| | Injury Risk | (gir) | Use Water | ************************************** | Cable Cut Location | | |

| | Identification Number | Version Number | Page Number |
|--|-----------------------|----------------|-------------|
| DO NOT CUT ANY ORANGE COLORED HIGH VOLTAGE CABLES. | 5G5-21101 | 6 | Page 4 of 4 |